
vertemax


Name: Stairway 70 - 3 Steps Weight: 99 lbs Standard: EN 12811-1; COHS; OSHA; ANSI/ASSE Material: Galvanised Steel Dimensions: imperial




This Technical Document must always be used in conjunction with **vertemax's General Qualifications** -See below


- 1. <u>Always</u> plan your work and installation
- 2. <u>Always</u> select the right equipment
- 3. Always regularly inspect your system

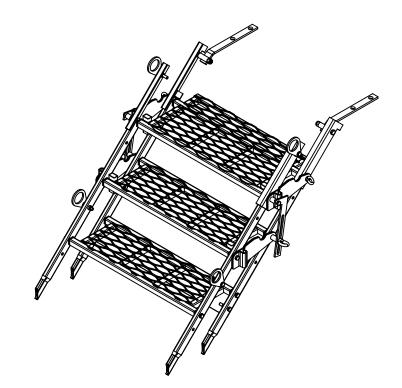

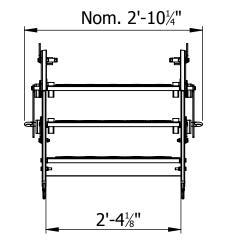


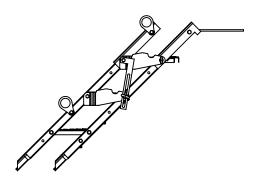




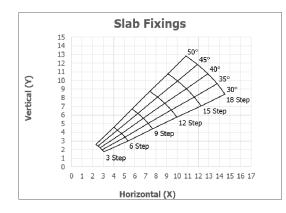


Slab Fixings			
Angle (a°)	Х	Y	
30	3' - 0 ²⁵ / ₃₂ "	1' - 8 ⁷ / ₈ "	
35	2' - 10 ⁷ / ₈ "	1' - 11 ³/4"	
40	2' - 8 ²³ / ₃₂ "	2' - 2 ⁹ / ₁₆ "	
45	2' - 6 ⁹ / ₃₂ "	2' - 5 ¹ / ₁₆ "	
50	2' - 3 ⁵ / ₈ "	2' - 7 ³/ ₈ "	

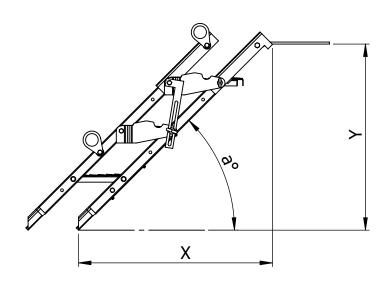

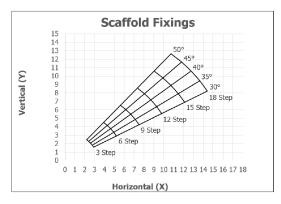


Scaffold Fixings			
Angle (a°)	Х	Y	
30	2' - 10 ²⁹ / ₃₂ "	1' - 6 ³/4"	
35	2' - 9 ⁵ / ₃₂ "	1' - 9 ¹¹ / ₁₆ "	
40	2' - 7 ⁵ / ₃₂ "	2' - 0 ¹⁷ / ₃₂ "	
45	2' - 4 ²⁹ / ₃₂ "	2' - 3 1/8"	
50	2' - 2 ¹³ / ₃₂ "	2' - 5 ¹⁷ / ₃₂ "	

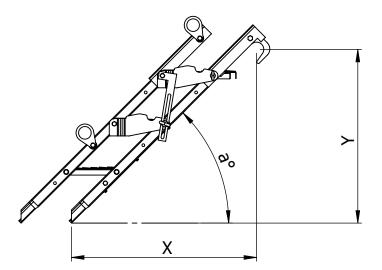





- 1. 2. 3.
- Loosen eye nuts Erect to desired angle Tighten eye nuts

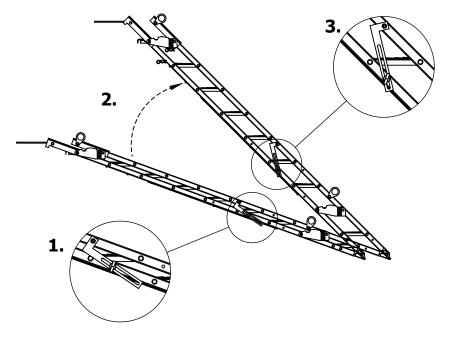


- Mount guard rails Fit retaining pin 4. 5.

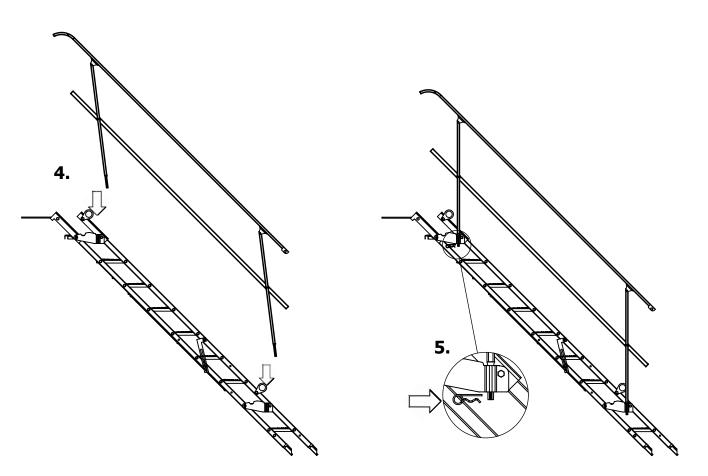


vertemax

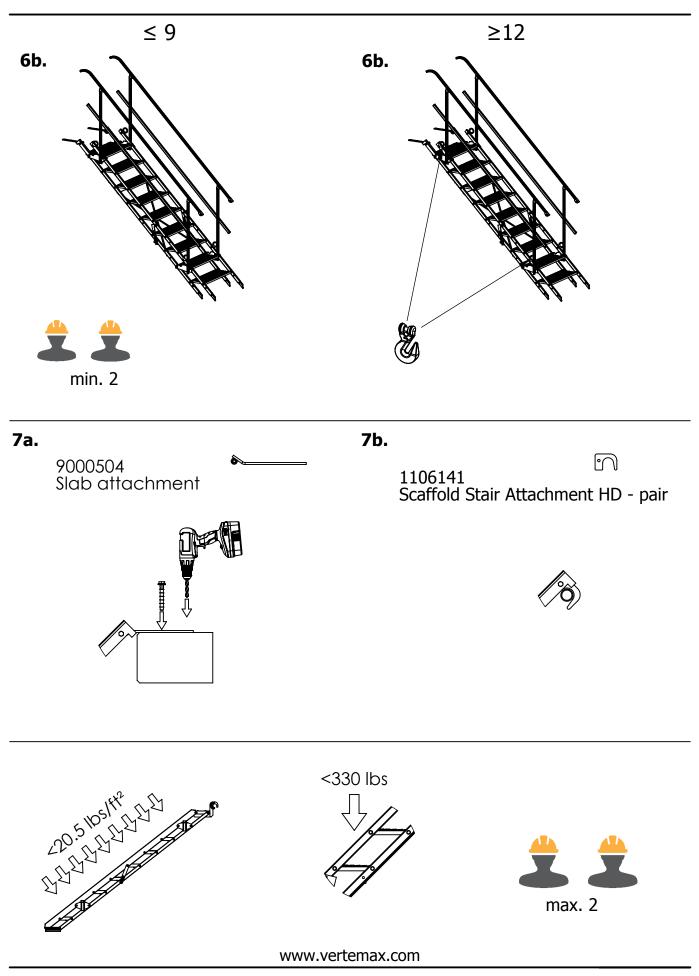


Joining Stairways - Max. 21 Steps

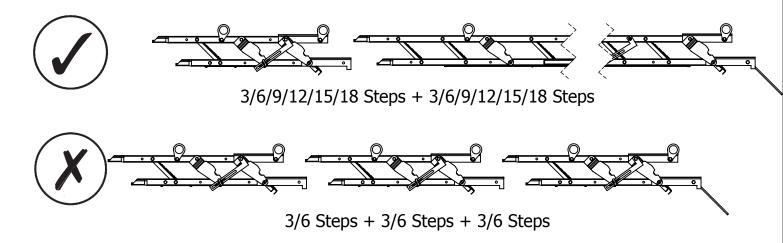

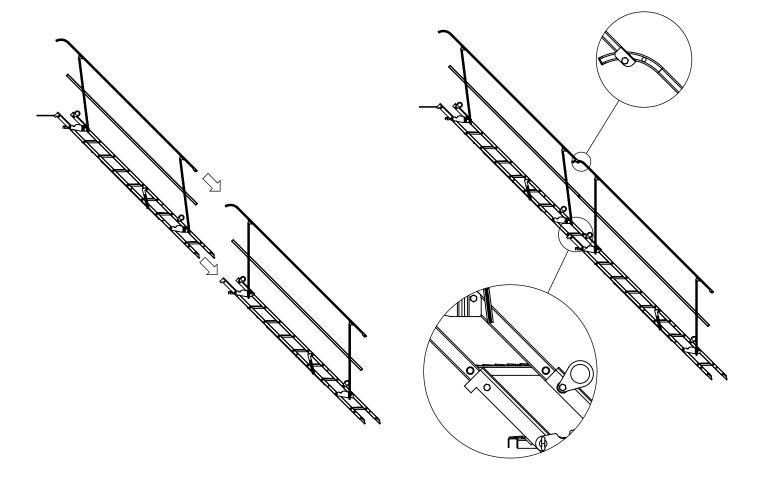




Stairways support - 18 & 21 steps

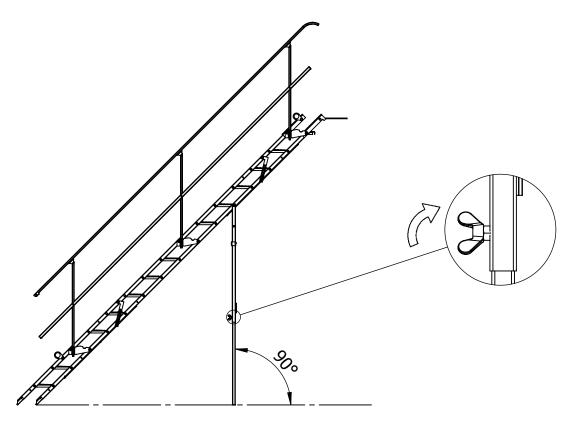



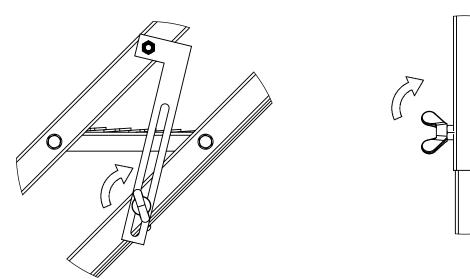


vertemax





5061009

Scaffold Stair Attachment HD

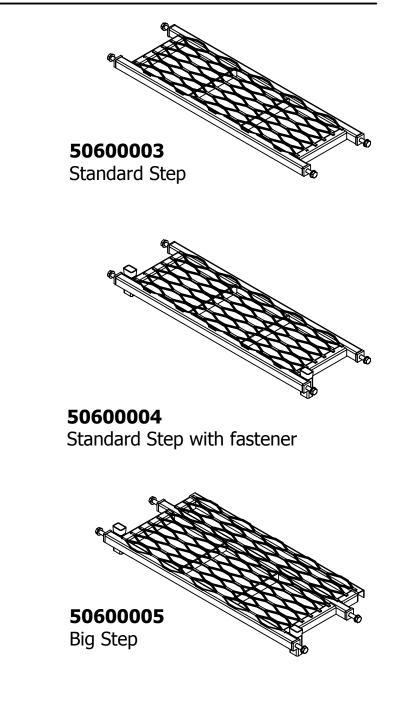



50600006

Stair Lock



For other parts and more information, please contact vertemax.



General Qualifications



These General Qualifications are applicable to all vertemax products and must always be read in conjunction with each products Technical Documentation (TD).

General

- Always check general product condition before use
- If in doubt always ask by contacting a representative of vertemax
- Reject any damaged or rusty components
- vertemax products and systems provide temporary protection during construction activity.
- vertemax products are NOT tested or intended:
 - to withstand impact by any vehicle,
 - to support or provide control of the public,
 - for the containment of bulk materials.

Always Plan your works

- Take note of location, proximity to permanent and temporary hazard structures.
- Take note of dimensions, layout and access areas.
- Always identify both the fall hazard for the installer and the falling materials hazard for persons and property below.
- These identified hazards should also be considered on dismantling.
- vertemax strongly recommends seeking competent Work at Height advice if in any doubt about the installer's or other's safety.
- Note the component weight as given on the TD sheets and ensure suitable handling equipment is available.
- Ensure local site Risk Assessment / Method Statement detail is observed and followed.

 Material type and thickness, edge proximity, depth of embedment, and proximity to other fixings, all impact the strength of a fixing. Please refer to manufacturer's instructions for fixing guidance and limitation. The dimensions for installation and the load capacity should be confirmed by the fixing manufacturer for each application. Competent fixings advice should be sought if in any doubt. Fine mesh containment Note that the addition of any fine containment mesh (such as on barriers or safety nets) increases the wind load attracted to the supports. Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. Coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protected. The system should then be fully inspected, any components replaced as necessary, and this installation confirmed as fit for continued use by a competent person. 		ixing selection
 fixings, all impact the strength of a fixing. Please refer to manufacturer's instructions for fixing guidance and limitation. The dimensions for installation and the load capacity should be confirmed by the fixing manufacturer for each application. Competent fixings advice should be sought if in any doubt. Fine mesh containment Note that the addition of any fine containment mesh (such as on barriers or safety nets) increases the wind load attracted to the supports. Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	All fixings should be confirmed as suitable for the chosen application site.
 fixing guidance and limitation. The dimensions for installation and the load capacity should be confirmed by the fixing manufacturer for each application. Competent fixings advice should be sought if in any doubt. Fine mesh containment Note that the addition of any fine containment mesh (such as on barriers or safety nets) increases the wind load attracted to the supports. Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances.	•	
 The dimensions for installation and the load capacity should be confirmed by the fixing manufacturer for each application. Competent fixings advice should be sought if in any doubt. Fine mesh containment Note that the addition of any fine containment mesh (such as on barriers or safety nets) increases the wind load attracted to the supports. Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. Coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and to installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		
 manufacturer for each application. Competent fixings advice should be sought if in any doubt. Fine mesh containment Note that the addition of any fine containment mesh (such as on barriers or safety nets) increases the wind load attracted to the supports. Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and tt installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		
 Competent fixings advice should be sought if in any doubt. Fine mesh containment Note that the addition of any fine containment mesh (such as on barriers or safety nets) increases the wind load attracted to the supports. Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	
 Fine mesh containment Note that the addition of any fine containment mesh (such as on barriers or safety nets) increases the wind load attracted to the supports. Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and this installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		
 Note that the addition of any fine containment mesh (such as on barriers or safety nets) increases the wind load attracted to the supports. Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. Coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and ti installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	Competent fixings advice should be sought if in any doubt.
 increases the wind load attracted to the supports. Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and this installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	Fi	
 Technical advice must be sought before any such addition. Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and the installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	
 Weather vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and the installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		increases the wind load attracted to the supports.
 vertemax products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	Technical advice must be sought before any such addition.
 Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	W	/eather
 doubt, contact a vertemax representative. If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	
 If in doubt, cease work, and use additional protection measures as required. All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. Coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		
 All safety systems should be kept clear of ice and snow. Inspection All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		•
 All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. .oading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage Vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	If in doubt, cease work, and use additional protection measures as required.
 All installed systems should be checked at least once every 7 days by a competent persor to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. .oading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	All safety systems should be kept clear of ice and snow.
 to ensure its continued integrity and that there are no signs of any potential failing. We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. Loading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and the installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	I	nspection
 We recommend that these checks are recorded in a site log. Please ensure any defective product identified during inspection is replaced immediately. .oading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and the installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	
 Please ensure any defective product identified during inspection is replaced immediately. coading Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		ensure its continued integrity and that there are no signs of any potential failing.
 Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and the installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	We recommend that these checks are recorded in a site log.
 Any vertemax products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and t installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	Please ensure any defective product identified during inspection is replaced immediately.
 ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and the installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	Lo	ading
 service you must ensure the area is otherwise protected. The system should then be fully inspected, any components replaced as necessary, and the installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	Any vertemax products subjected to loading, or used in anger, should be assessed to
 The system should then be fully inspected, any components replaced as necessary, and the installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		ensure it continues to provide the necessary protection. If this involves removing from
 installation confirmed as fit for continued use by a competent person. Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		service you must ensure the area is otherwise protected.
 Storage vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	The system should then be fully inspected, any components replaced as necessary, and the
 vertemax recommends the use of its own storage and transit solutions. Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 		installation confirmed as fit for continued use by a competent person.
 Take careful note of lifting and loading limits. All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	St	orage
 All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances. 	•	vertemax recommends the use of its own storage and transit solutions.
effect due to weather or corrosive substances.	•	Take careful note of lifting and loading limits.
due to weather or corrosive substances.	•	All components should be stored in a manner that limits any detrimental environmental
		effect
Traceability		due to weather or corrosive substances.
	т	raceability
All vortemax products are traceable	-	-

• All vertemax products are traceable.

Кеу		
	Symbol	Meaning
1.	Symbol	Tech Data
	0	
2.		If in doubt, check online @ www.vertemax.com
3.		If in doubt call vertemax Ltd on +1-905-502- 5732
4	I	Always Check/ Always confirm
5	Â	Fall Hazard
6		Do this
7	X	Don't do this
8	Ŵ	Be Aware
9	\$ 3	Recycle damaged materials
10	$\bigwedge^{\leftrightarrow}_{\longleftarrow}$	Recommended Distance

11	×	Secure yourself against falling
12		Protect those below from falling equipment
13		Catch fan – Keep Clean from snow
14	?kN ➡	Sheer Load
15	?kN	Tensile Load
16	≤ 3.5 kNm)	Moment Load
17	Max ?kN	Max Wind Load
18	+ 7	Check Weekly
19	\int_{-}^{-}	Insert
20	$\mathbf{\tilde{\mathbf{x}}}$	Install
21	? Nm	Torque Spanner and settings

22		Flat Head Screwdriver
22		
23		Cross Head/Phillips Screwdriver
24		Tighten
25		Untighten
26		Tighten by hand
27	₩ + # +	Drill and Select appropriate anchor
28		Floor/General
29		Concrete slab/floor
30		Timber Beam
31		Alu Beam